



Pressure/torque conversion chart

Tool model: EDGE-1S



Pressure		Torque		Pressure
psi	ft.·lb	N·m		bar
1500	178	241		104
1600	190	258		110
1800	215	292		124
2000	240	325		138
2200	265	359		152
2400	290	393		165
2600	315	427		179
2800	340	461		193
3000	365	495		207
3200	390	529		220
3400	416	564		234
3600	441	598		248
3800	467	633		262
4000	492	667		276
4200	517	701		290
4400	543	736		303
4600	568	770		317
4800	594	805		331
5000	619	839		345
5200	645	874		358
5400	670	909		372
5600	696	943		386
5800	721	978		400
6000	747	1013		414
6200	772	1047		427
6400	797	1081		441
6600	823	1115		455
6800	848	1149		468
7000	873	1183		482
7200	899	1218		496
7400	925	1253		510
7600	950	1288		524
7800	976	1323		538
8000	1002	1358		552
8200	1027	1393		565
8400	1053	1427		579
8600	1078	1462		593
8800	1104	1496		607
9000	1129	1530		620
9200	1155	1565		634
9400	1180	1600		648
9600	1206	1635		662
9800	1235	1670		676
10000	1257	1704		690