



## Pressure/torque conversion chart

Tool model: EDGE-9S

Pressure		Torque		Pressure	
psi	ft.·lb	N·m	bar	psi	bar
1500	1230	1667	104		
1600	1314	1781	110		
1800	1482	2009	124		
<b>2000</b>	<b>1650</b>	<b>2237</b>	<b>138</b>		
2200	1821	2469	152		
2400	1992	2700	165		
2600	2163	2932	179		
2800	2334	3164	193		
<b>3000</b>	<b>2505</b>	<b>3396</b>	<b>207</b>		
3200	2675	3626	220		
3400	2845	3857	234		
3600	3015	4087	248		
3800	3185	4318	262		
<b>4000</b>	<b>3355</b>	<b>4548</b>	<b>276</b>		
4200	3526	4780	290		
4400	3697	5012	303		
4600	3868	5243	317		
4800	4039	5475	331		
<b>5000</b>	<b>4210</b>	<b>5707</b>	<b>345</b>		
5200	4383	5942	358		
5400	4556	6176	372		
5600	4729	6411	386		
5800	4902	6645	400		
<b>6000</b>	<b>5075</b>	<b>6880</b>	<b>414</b>		
6200	5249	7116	427		
6400	5423	7351	441		
6600	5597	7587	455		
6800	5771	7823	468		
<b>7000</b>	<b>5945</b>	<b>8059</b>	<b>482</b>		
7200	6117	8292	496		
7400	6289	8525	510		
7600	6461	8759	524		
7800	6633	8992	538		
<b>8000</b>	<b>6805</b>	<b>9225</b>	<b>552</b>		
8200	6979	9461	565		
8400	7153	9697	579		
8600	7327	9932	593		
8800	7501	10168	607		
<b>9000</b>	<b>7675</b>	<b>10404</b>	<b>620</b>		
9200	7851	10643	634		
9400	8027	10881	648		
9600	8203	11120	662		
9800	8397	11359	676		
<b>10000</b>	<b>8555</b>	<b>11597</b>	<b>690</b>		